

CHARGER

RBC IP54

LEAB
mobile energy



USER MANUAL
VERSION 3
22/06/2021

Table of Contents

| | | |
|-----------|---|-----------|
| 1 | About this Manual | 3 |
| 2 | Safety | 4 |
| 2.1 | Intended Use..... | 4 |
| 2.2 | Foreseeable Misuse..... | 5 |
| 3 | About this Product | 6 |
| 4 | Technical Specifications | 8 |
| 5 | Package Contents | 12 |
| 6 | Assembly | 12 |
| 7 | Setting the Charging Parameters | 12 |
| 8 | Checking the Charging Parameter Settings | 15 |
| 9 | Changing charging parameters | 16 |
| 10 | Installation | 16 |
| 11 | Operation | 19 |
| 11.1 | Switching On..... | 19 |
| 11.2 | Switching Off..... | 21 |
| 12 | Maintenance | 21 |
| 13 | Disposal | 21 |
| 14 | EU Declaration of Conformity | 21 |
| 15 | Appendix | 22 |

1 About this Manual

Read this manual carefully and keep it in a safe place. This manual is aimed at Skilled workers in the field of automotive electrics.

Any modifications to the product or its components are prohibited and do not conform to its intended use. Only use original LEAB or LEAB-approved accessories.

Throughout the manual, you will be alerted to warnings and safety notices about potential hazards associated with handling the device. The colours and signal words indicate the severity of the hazard:



Notice

Possibility of material damage

The signal word *Attention* indicates that there is a possibility of material damage. To avoid material damage, follow the instruction.



⚠ CAUTION

Danger that can lead to minor injuries

Safety instructions with the signal word *CAUTION* indicate a hazard which, if not avoided, can result in minor or moderate injury. Read the safety instructions carefully and follow them to avoid the hazard.



⚠ WARNING

Hazards that can lead to severe injuries or death

Safety instructions with the signal word *WARNING* indicate a hazard which, if not avoided, can result in death or severe injury. Read the safety instructions carefully and follow them to avoid the hazard.

**⚠ DANGER****Danger that will lead to severe injury or death**

Safety instructions with the signal word *Danger* indicate a hazard which, if not avoided, will result in death or severe injury. Read the safety instructions carefully and follow them to avoid the hazard.

You will find useful tips and tricks in certain parts of the manual. These appear as follows:

**TIP****Tips provides additional, useful information.**

Read the tip carefully and follow the instructions where applicable.

2 Safety

This manual will help you to handle the device safely. Use the device solely in accordance with its intended use. Any modifications to the device or its components are prohibited and do not conform to its intended use. Observe the safety instructions.

Keep this manual in a place where it can be accessed quickly.

2.1 Intended Use

The charger is a robust charger for permanent installation in vehicles, with 12 and 24 V on-board power supply, for charging lead batteries and LION Brix lithium batteries.

The device is designed for a temperature range of -35 °C ... 55 °C. Do not charge batteries with this charger outside the specified temperature range. At higher temperatures, the output power of the charger automatically decreases.

**⚠ WARNING****Risk of fire from overheated battery**

Flammable gases can escape if the battery overheats.

1. Always charge batteries in well-ventilated rooms and away from ignition sources.

**⚠ WARNING****Burns from escaping acid**

Acid can leak out when handling batteries.

1. Wear acid-proof clothing when handling batteries.

**⚠ WARNING****Risk of injury from damaged, frozen or deformed batteries**

Damaged, frozen or deformed batteries can cause injuries.

1. Before using the battery, make sure that the battery is undamaged and the electrolyte is not frozen.

2.2 Foreseeable Misuse

The charger is designed for Interior use in vehicles. Never assemble the charger outside the vehicle. The charger is designed to charge all types of Lead-acid batteries (wet, gel, AGM) and lithium batteries. Charge only the specified battery types with the charger.

To avoid damage, never pinch the leads of the charger. In the event of damage, unplug the charger immediately and contact your dealer or LEAB.

**Notice****Device defects from incorrect installation**

Incorrect installation can result in device defects.

1. Install the device in a dry and cool location.

3 About this Product

RBC chargers are microprocessor-controlled battery chargers for charging open and closed lead-acid, lead-gel and AGM batteries.

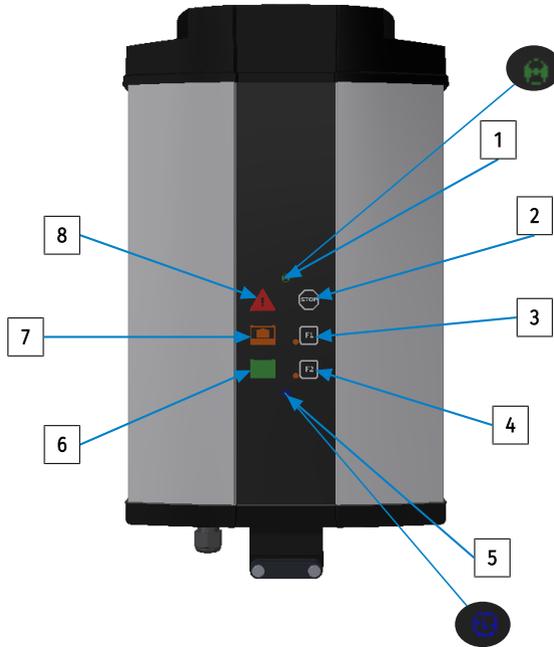


Fig. 1: RBC charger front view

| | |
|-----------------------------|---------------------------|
| 1 'Data connection' LED | 2 Stop button |
| 3 F1 button | 4 F2 button (no function) |
| 5 'Ready for operation' LED | 6 'Charging complete' LED |
| 7 'Charging' LED | 8 'Error' LED |



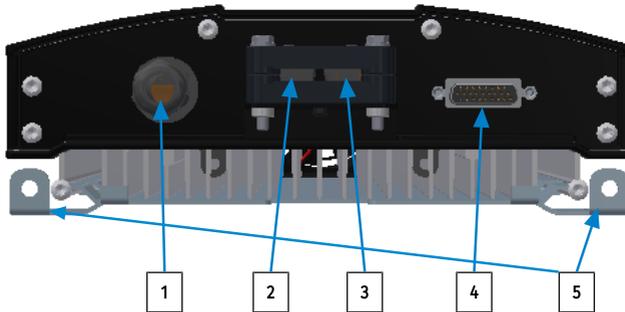


Fig. 2: RBC charger connection side

- | | |
|---|-----------------------|
| 1 Mains connection cable of the charger | 2 Charging cable, red |
| 3 Charging cable, blue | 4 Battery data line |
| 5 Mounting bracket | |

4 Technical Specifications

| | 0101036980 | 0101036097 |
|-------------------------------------|---|---|
| Modell | RBC 1280 | RBC 12105 |
| Battery type | Open and closed lead batteries (wet, gel/AGM) | Open and closed lead batteries (wet, gel/AGM) |
| Charging characteristics | 30 selectable charging parameters | 30 selectable charging parameters |
| Battery capacity | 50 Ah ... 800 Ah | 50 Ah ... 800 Ah |
| Charging current | 80 A | 105 A |
| Ripple | < 3 % | 3 % |
| Main charging | 14.1 V - 14.4 V | 14.1 V - 14.4 V |
| Trickle charging | 13.5 V - 13.8 V | 13.5 V - 13.8 V |
| Input values | 230 V/50 Hz | 230 V/50 Hz |
| Input voltage | 195 V ... 264 V | 195 V ... 264 V |
| Input frequency | 47 Hz ... 63 Hz | 47 Hz ... 63 Hz |
| Degree of efficiency, max. | > 93% | > 93% |
| International Protection (IP class) | IP54 | IP54 |
| Protection class | I | I |
| Operating temperature | -35 °C ... +55 °C | -35 °C ... +55 °C |
| Cooling | Active | Active |
| Dimensions (L x W x H) | 410 mm x 230 mm x 78 mm | 367 mm x 230 mm x 83 mm |
| Weight | 5.3 kg | 6.7 kg |
| AC cable | 1.5 m, two-pin earthed plug | 1.5 m, two-pin earthed plug |
| DC cable | 2 x 2 m, without plug | 2 x 2 m, without plug |

| | 0101036990 | 0101036992 |
|-------------------------------------|---|---|
| Modell | RBC 2440 | RBC 2440 |
| Battery type | Open and closed lead batteries (wet, gel/AGM) | Open and closed lead batteries (wet, gel/AGM) |
| Charging characteristics | 30 selectable charging parameters | 30 selectable charging parameters |
| Battery capacity | 50 Ah ... 800 Ah | 50 Ah ... 800 Ah |
| Charging current | 40 A | 40 A |
| Ripple | 3 % | 3 % |
| Main charging | 28.2 V - 28.8 V | 28.2 V - 28.8 V |
| Trickle charging | 27.0 V - 27.6 V | 27.0 V - 27.6 V |
| Input values | 230 V/50 Hz | 230 V/50 Hz |
| Input voltage | 195 V ... 264 V | 195 V ... 264 V |
| Input frequency | 47 Hz ... 63 Hz | 47 Hz ... 63 Hz |
| Degree of efficiency, max. | > 93% | > 93% |
| International Protection (IP class) | IP54 | IP54 |
| Protection class | I | I |
| Operating temperature | -35 °C ... +55 °C | -35 °C ... +55 °C |
| Cooling | Active | Passive |
| Dimensions (L x W x H) | 320 mm x 235 mm x 110 mm | 410 mm x 230 mm x 78 mm |
| Weight | 5.5 kg | 5.6 kg |
| AC cable | 1.5 m, two-pin earthed plug | 1.5 m, two-pin earthed plug |
| DC cable | 2 x 2 m, without plug | 2 x 2 m, without plug |

| | 0101036081 | 0101036096 |
|-------------------------------------|---|---|
| Modell | RBC 2480 | RBC 24105 |
| Battery type | Open and closed lead batteries (wet, gel/AGM) | Open and closed lead batteries (wet, gel/AGM) |
| Charging characteristics | 30 selectable charging parameters | 30 selectable charging parameters |
| Battery capacity | 50 Ah ... 800 Ah | 50 Ah ... 800 Ah |
| Charging current | 80 A | 105 A |
| Ripple | 3 % | < 3 % |
| Main charging | 28.2 V - 28.8 V | 28.2 V - 28.8 V |
| Trickle charging | 27.0 V - 27.6 V | 27.0 V - 27.6 V |
| Input values | 230 V/50 Hz | 230 V/50 Hz |
| Input voltage | 195 V ... 264 V | 195 V ... 264 V |
| Input frequency | 47 Hz ... 63 Hz | 47 Hz ... 63 Hz |
| Degree of efficiency, max. | > 93% | > 93% |
| International Protection (IP class) | IP54 | IP54 |
| Protection class | I | I |
| Operating temperature | -35 °C ... +55 °C | -35 °C ... +55 °C |
| Cooling | Active | Active |
| Dimensions (L x W x H) | 410 mm x 240 mm x 78 mm | 367 mm x 230 mm x 83 mm |
| Weight | 5.2 kg | 6.7 kg |
| AC cable | 1.5 m, two-pin earthed plug | 1.5 m, two-pin earthed plug |
| DC cable | 2 x 2 m, without plug | 2 x 2 m, without plug |

| | 0101078560 | 0101036095 |
|-------------------------------------|--|---|
| Modell | RBC 4860 | RBC 24105 |
| Battery type | Open and closed lead batteries (wet, gel/ AGM) | Open and closed lead batteries (wet, gel/AGM) |
| Charging characteristics | 30 selectable charging parameters | 30 selectable charging parameters |
| Battery capacity | 50 Ah ... 800 Ah | 50 Ah ... 800 Ah |
| Charging current | 60 A | 105 A |
| Ripple | < 3 % | < 3 % |
| Main charging | 56.4 V - 57.6 V | 28.2 V - 28.8 V |
| Trickle charging | 54.0 V - 55.2 V | 27.0 V - 27.6 V |
| Input values | 230 V/50 Hz | 230 V/50 Hz |
| Input voltage | 195 V ... 264 V | 195 V ... 264 V |
| Input frequency | 47 Hz ... 63 Hz | 47 Hz ... 63 Hz |
| Degree of efficiency, max. | > 93% | > 93% |
| International Protection (IP class) | IP54 | IP54 |
| Protection class | I | I |
| Operating temperature | -35 °C ... +55 °C | -35 °C ... +55 °C |
| Cooling | Active | Active |
| Dimensions (L x W x H) | 367 mm x 230 mm x 83 mm | 367 mm x 230 mm x 83 mm |
| Weight | 6.9 kg | 6.7 kg |
| AC cable | 1.5 m, two-pin earthed plug | 1.5 m, two-pin earthed plug |
| DC cable | 2 x 2 m, without plug | 2 x 2 m, without plug |

5 Package Contents

| Item | No. |
|-----------------|-----|
| Battery charger | 1x |
| User manual | 1x |

6 Assembly

To assemble the device, proceed as follows:

- ✓ Choose a cool, dry and well-ventilated assembly site.
 - ✓ Do not mount the device directly next to or above batteries.
 - ✓ Guarantee adequate cooling for an unimpeded supply of cooling air.
 1. Fasten the device to the side holes (5 mm \varnothing) on a flat surface.
- ⇒ The device is assembled.

7 Setting the Charging Parameters

The RBC charger contains 30 different charging parameters (charging characteristic, battery capacity and charging mode) which you can select before connecting to the battery. A graphical illustration of the charging characteristics can be found in *Appendix [▶ 22]*.

To set the charging parameters, proceed as follows:

- ✓ Before setting, select the desired settings using the table below.
- ✓ The charger is disconnected from the 230 V mains.
- ✓ The charger is not connected to the battery.
 1. Connect the mains plug to a 230 V mains supply.
 2. As soon as the 'Ready for operation' LED lights up blue (after approx. 5 s), press the STOP button for 10 s until all LEDs are flashing briefly.
 - ⇒ You are in configuration mode.

NOTE! When first used, charging parameters 1 (charging characteristic LK10-06) and 9 (battery capacity 50 Ah) are preset by default.

3. To select a parameter from the list, keep pressing the STOP button until you reach the desired position.




Fig. 3: F1 and F2 buttons

4. Select or deselect a setting by pressing the F1 button.
5. Remove the device from the 230 V mains.

⇒ The charging parameters are set and saved.

Set the following parameters for the different 'Power Supply' charging modes:

NOTE! Depending on the charger, a voltage of 12 V or 24 V is permanently output as standard in the 'Power Supply' charging modes. If you require a higher voltage, please contact LEAB directly.

| Charging mode | Settings |
|-------------------------|---|
| Charging mode (default) | 25, Charging mode: OFF 27, CAN mode: OFF 30: Charging mode: OFF |
| PDO Power Supply | 25, Charging mode: OFF 27, CAN mode: ON 30: Charging mode: OFF |
| SDO Power Supply | 25, Charging mode: ON 27, CAN mode: ON 30: Charging mode: OFF |

| |  |  |  |  |  | Charging parameter |
|----|---|---|---|---|---|---|
| | Error | Charging | Charging complete | Ready for operation | Data connection | |
| 1 | red | orange | green | blue | green | LK10-06 |
| 2 | red | orange | green | blue | green | LK10-18 |
| 3 | red | orange | green | blue | green | LK20-09 |
| 4 | red | orange | green | blue | green | LK10-05 |
| 5 | red | orange | green | blue | green | PP100 |
| 6 | red | orange | green | blue | green | PP101 |
| 7 | red | orange | green | blue | green | PP102 |
| 8 | red | orange | green | blue | green | --- |
| 9 | red | orange | green | blue | green | Capacity 50 Ah |
| 10 | red | orange | green | blue | green | Capacity 75 Ah |
| 11 | red | orange | green | blue | green | Capacity 100 Ah |
| 12 | red | orange | green | blue | green | Capacity 125 Ah |
| 13 | red | orange | green | blue | green | Capacity 150 Ah |
| 14 | red | orange | green | blue | green | Capacity 200 Ah |
| 15 | red | orange | green | blue | green | Capacity 250 Ah |
| 16 | red | orange | green | blue | green | Capacity 300 Ah |
| 17 | red | orange | green | blue | green | Capacity 350 Ah |
| 18 | red | orange | green | blue | green | Capacity 400 Ah |
| 19 | red | orange | green | blue | green | Capacity 450 Ah |
| 20 | red | orange | green | blue | green | Capacity 500 Ah |
| 21 | red | orange | green | blue | green | Capacity 550 Ah |
| 22 | red | orange | green | blue | green | Capacity 600 Ah |
| 23 | red | orange | green | blue | green | Capacity 700 Ah |
| 24 | red | orange | green | blue | green | Capacity 800 Ah |
| 25 | red | orange | green | blue | green | Charging mode <input type="checkbox"/> off <input checked="" type="checkbox"/> on Power Supply <input type="checkbox"/> off <input checked="" type="checkbox"/> on |
| 26 | red | orange | green | blue | green | External input <input type="checkbox"/> off <input checked="" type="checkbox"/> on |
| 27 | red | orange | green | blue | green | CAN mode <input type="checkbox"/> off <input checked="" type="checkbox"/> on |
| 28 | red | orange | green | blue | green | Parallel operation <input type="checkbox"/> off <input checked="" type="checkbox"/> on |
| 29 | red | orange | green | blue | green | Not used |
| 30 | red | orange | green | blue | green | Charging mode <input type="checkbox"/> off <input checked="" type="checkbox"/> on |

Fig. 4: Charging parameter settings

8 Checking the Charging Parameter Settings

To check the charging parameter settings, it is necessary to switch back to configuration mode.

Check the Charging Characteristic Setting

To check the charging characteristic setting, proceed as follows:

- ✓ The desired charging parameters are set and saved.
 - ✓ The charger is disconnected from the 230 V mains.
 1. Connect the mains plug to a 230 V mains supply.
 2. As soon as the 'Ready for operation' LED lights up blue (after approx. 5 s), press the Stop button for 10 s until all LEDs are flashing.
 - ⇒ The device is in configuration mode.
 3. Press the Stop button until you are in the desired setting for the charging characteristic.
- ⇒ The LED next to the F1 button lights up orange. The charging characteristic is set and saved.

Check the battery capacity setting

To check the battery capacity settings, proceed as follows:

4. Keeping pressing the Stop button until you are in the desired battery capacity setting.
- ⇒ The LED next to the F1 button lights up orange. The battery capacity is set and saved.

Check the charging mode setting

The charging mode setting can be checked using the following features:

- If one of the charging modes 'Charging mode (25), External input On (26), CAN mode Master (27), ON:Parallel operation activated (28) or Charging mode (30)' is set, the LED next to the F1 button is not lit.
- If one of the charging modes 'Power Supply (25), External Input Off (26) or CAN mode Master ext. (27)' is set, the LED next to the F1 button lights up orange.

9 Changing charging parameters

The settings of the charging parameters can be changed at any time. To do this, proceed as follows:

- ✓ The device is disconnected from the 230 V mains supply.
- ✓ The device is not connected to a battery.
 1. Connect the mains plug to a 230 V mains supply.
 2. As soon as the 'Ready for operation' LED lights up blue (after approx. 5 s), press the Stop button for 10 s until all LEDs are flashing.
 - ⇒ The device is in configuration mode.
 3. Set the desired charging parameters as described in *Setting the Charging Parameters* [▶ 12].
 - ⇒ The charging parameters are changed.

10 Installation

Battery Connection

To install the device in the vehicle, proceed as follows:

1. Disconnect the battery from the on-board power supply.
 - ⚠ **WARNING!** Disconnect the negative cable first.
2. Secure the positive cable of the device as close as possible to the vehicle battery with a suitable fuse.
3. Connect the positive cable of the device to the positive terminal of the battery.
4. Connect the negative cable of the device to the negative terminal of the battery.
5. Connect the vehicle battery to the on-board power supply.
 - ⇒ The device is installed.

Connection to the 230 V Mains

To install the device to the 230 V mains, proceed as follows:

NOTE! The charger is only suitable for connection to fused, earthed 230 V mains supplies.

1. Connect the mains plug to a 230 V mains supply.

⇒ The charger is connected to the 230 V mains supply.

Connecting the Sensor Cable

The sensor cable measures the battery temperature (sensor cable TS) or the battery temperature and voltage (sensor cable CTS) in order to charge the battery optimally.

To connect the sensor cable, proceed as follows:

NOTE! When connecting, pay attention to the instructions and notes in the sensor cable installation instructions.

1. Connect the sensor cable to the charger.

⇒ The sensor cable is connected.

Connecting the D-Sub Connector

The integrated D-Sub connector allows you to control various signals.

| Pin | Description |
|-----|------------------------------------|
| 1 | CAN Bus high* |
| 2 | Voltage sensor (+) |
| 3 | Temperature sensor (+) |
| 4 | LED green (+) |
| 5 | LEB yellow (+) |
| 7 | Insulated ground* |
| 8 | Pilot Brix |
| 9 | CBL relay contact, normally closed |
| 10 | CAN bus low* |
| 11 | Remote input (-)* |
| 12 | Temperature sensor (-) |

| Pin | Description |
|-----|-----------------------------------|
| 14 | LED red (-) |
| 18 | CBL relay contact, normally open |
| 19 | Remote input (+)* |
| 20 | Voltage sensor (-) |
| 22 | LED (-) |
| 25 | Insulated 5 V (50 mA) output (+)* |
| 26 | CBL input |

*The CAN bus signals, CBL, the remote input and the insulated 5 V output are galvanically isolated from the DC output.

NOTE! Pins that are not listed are not assigned.

External LED Connection

The LED shows the charge status of the battery.

To connect the external LEDs, proceed as follows:

1. Connect the wire ends of the external LEDs to pin 4, pin 5, pin 14 and pin 22.

⇒ The external LEDs are connected.

EBrix Connection (24 V)

You can connect the RBC 24 V charger to the eBrix system using a suitable adapter.

NOTE! Note that the RBC 24105 with part number 101036095 cannot be connected to an eBrix.

CBL Control Relay Connection

A potential-free changeover contact is integrated in the RBC chargers, which switches during charging operation. This option can be used, for example, to implement an electrical start interlock with 230 V connection or charge monitoring.

Switching Function of the Changeover Contact



Fig. 5: Switching Function of the Changeover Contact

- When the charger is switched off, pin 9 and pin 26 are connected.
- When the charger is switched on, pin 26 and pin 18 are connected.

Technical Data (insulation) Capacity (max. values)

Output to housing: 500 V Max. 60 V (DC): 0.25 A

Output to ground: 120 V

To install the CBL control relay, proceed as follows:

1. Solder the end of the cable to the D-sub connector.
2. Connect the wire ends to pin 26, pin 9 and pin 18.
3. Plug the D-sub connector into the connector for the CBL control relay on the device.

⇒ The CBL control relay is installed.

11 Operation

11.1 Switching On

To switch on the device, proceed as follows:

1. Connect the mains plug to a 230 V mains supply.

⇒ The device is switched on.

NOTE! After connection to the mains, the LED flashes red for 2 seconds (device test).

NOTE! When the battery is charging, the 'Charging' LED is lit orange.

NOTE! When the battery is fully charged, the 'Charging complete' LED is lit green.

Operating status

|  |  |  | Description |
|---|---|---|-------------------------------------|
|  |  |  | Battery not connected/No CAN signal |
|  |  |  | Charging is interrupted |
|  |  |  | Charger in first charging phase |
|  |  |  | Charger in second charging phase |
|  |  |  | Charger in third charging phase |
|  |  |  | Battery fully charged |
|  |  |  | Charger waiting for remote |

Tab. 1: Display of the operating status LEDs

Charging the Battery

The charger begins to charge the battery as soon as the charger is connected to the 230 V mains.

Interrupting the Charging Process

To interrupt the charging process, proceed as follows:

1. To interrupt charging, press the Stop button.
 - ⇒ 'Charging complete' LED flashes green.
2. To continue charging, press the Stop button again.

⇒ The charging process is now interrupted

NOTE! If the Stop button is not pressed again, charging remains interrupted.

11.2 Switching Off

To switch off the charger, proceed as follows:

1. Disconnect the mains plug from the 230 V mains.

⇒ The device is switched off.

12 Maintenance

Check the charger as follows every time before you use it:

- Check the mains cable and mains plug for damage.
- Check charging cables and connections for damage.
- Check the charger for external damage.
- Ensure that the wiring between the charging cable and the charger is secure.

NOTE! For battery maintenance, refer to the battery manufacturer's instructions.

13 Disposal



Dispose of the device in accordance with the Waste Electrical and Electronic Equipment Regulations (WEEE).

The system must not be disposed of with household waste. Take it to a recycling point or return it to your point of sale.

14 EU Declaration of Conformity



The **RBC charger** complies with the requirements of the following directives:

- 2014/30/EU: EMV
- 2014/35/EU: NRL
- 2011/65/EU: RoHS

15 Appendix

Charging Characteristics

NOTE! To select the correct charging characteristic for your battery, refer to the instructions of your battery manufacturer.

NOTE! The current, compared to the nominal capacity, is given in coulombs (C), e.g. 0.2 C for a 100 Ah battery results in 20 A.

LK10-05 - Freely ventilated lead-acid

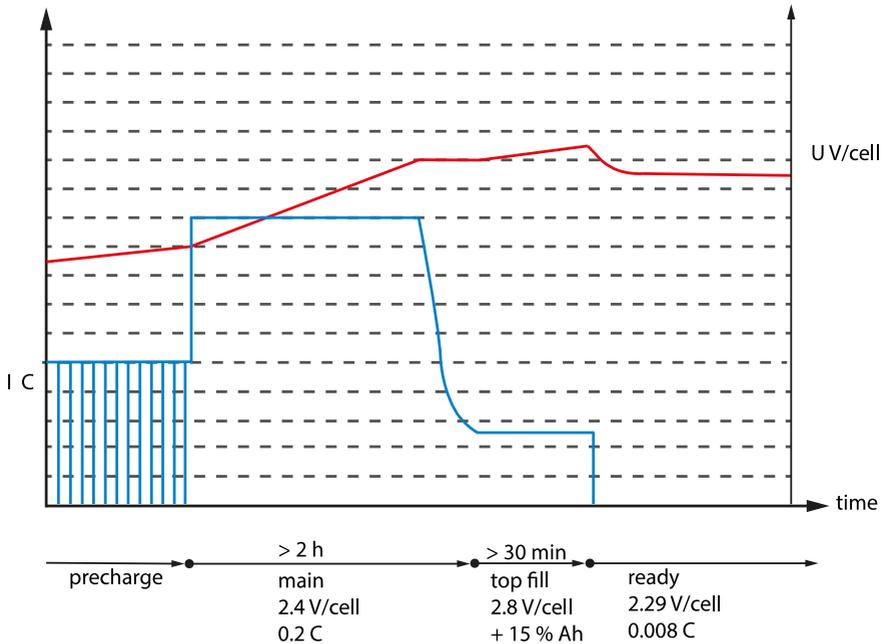


Fig. 6: Charging characteristic LK10-05

In the "Top-Fill" charging phase, the battery is charged with +15% more current compared to the main charging phase.

In the range [-30 °C ... -35 °C] and [+45 °C ... +60 °C] the current is reduced to 0.

| Voltage per cell | 12 V system | 24 V system |
|------------------------|---------------------------|---------------------------|
| 2.4 V / 2.8 V / 2.29 V | 14.4 V / 16.8 V / 13.74 V | 28.8 V / 33.6 V / 27.48 V |

LK10-06 - Freely ventilated lead-acid (default)

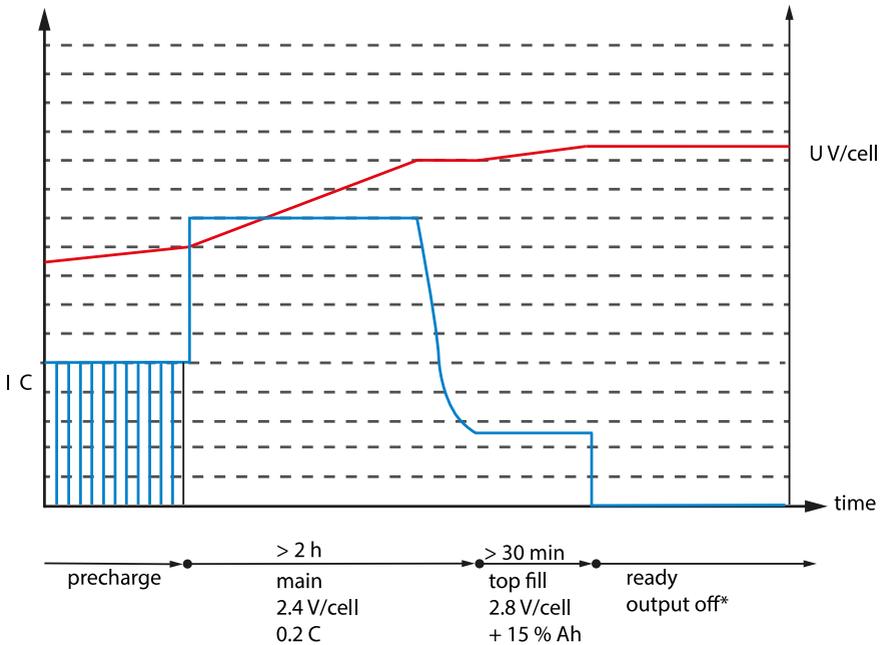


Fig. 7: Charging characteristic LK10-06

In the “Top-Fill” charging phase, the battery is charged with +15% more current compared to the main charging phase.

In the range [-30 °C ... -35 °C] and [+45 °C ... +60 °C] the current is reduced to 0.

In the maintenance phase, the battery voltage is checked periodically; if the battery voltage falls below 2.17 V per cell, the battery is charged for 2 minutes with a pulse charge of 0.05 C.

| Voltage per cell | 12 V system | 24 V system |
|------------------|-------------------|-------------------|
| 2.4 V/2.8 V/Off | 14.4 V/16.8 V/Off | 28.8 V/33.6 V/Off |

LK10-18 - Freely ventilated lead-acid

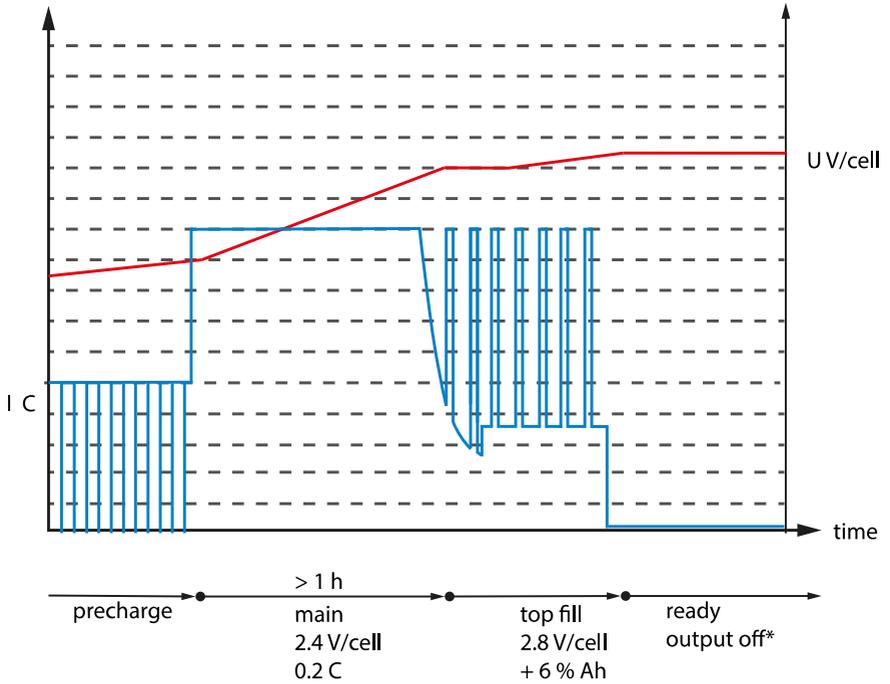


Fig. 8: Charging characteristic LK10-18

In the "Top-Fill" charging phase, the battery is charged with +6 % more current compared to the main charging phase. In addition, the battery is charged with a pulse charge to accelerate the charging process.

In the range [-30 °C ... -35 °C] and [+45 °C ... +60 °C] the current is reduced to 0.

In the maintenance phase, the battery voltage is checked periodically; if the battery voltage falls below 2.17 V per cell, the battery is charged for 2 minutes with a pulse charge of 0.05 C.

| Voltage per cell | 12 V system | 24 V system |
|------------------|-------------------|-------------------|
| 2.4 V/2.8 V/Off | 14.4 V/16.8 V/Off | 28.8 V/33.6 V/Off |

LK20-09 - Sealed gel lead-acid

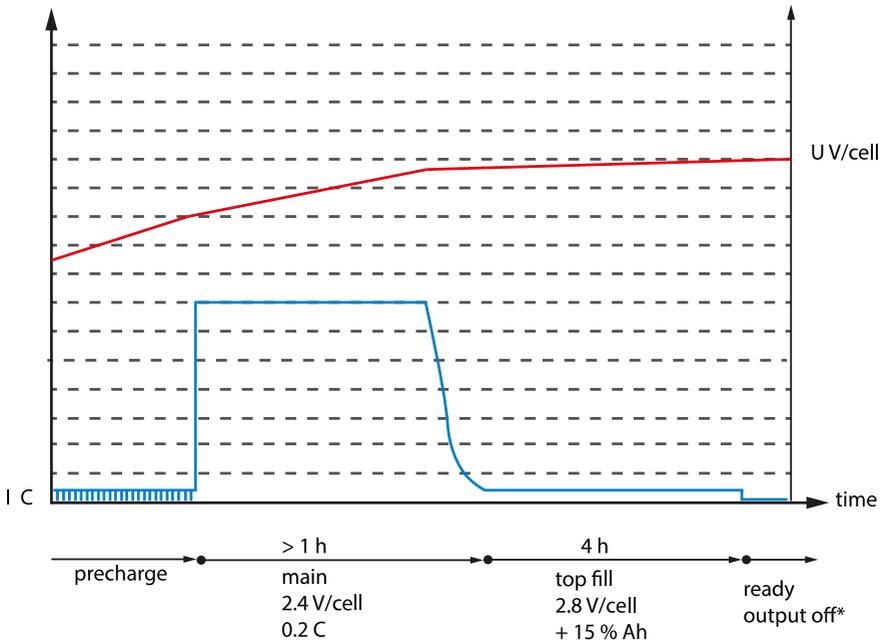


Fig. 9: Charging characteristic LK20-09

The charging characteristic contains an equalisation charge. If the battery is connected to the charger for 16 h, the battery is charged with a 30 hour equalisation charge, a current of 0.006 C and a voltage of 2.8 V per cell.

| Voltage per cell | 12 V system | 24 V system |
|------------------|-------------------|-------------------|
| 2.35 V/2.8 V/Off | 14.1 V/16.8 V/Off | 28.2 V/33.6 V/Off |

PP100 - Freely ventilated lead-acid

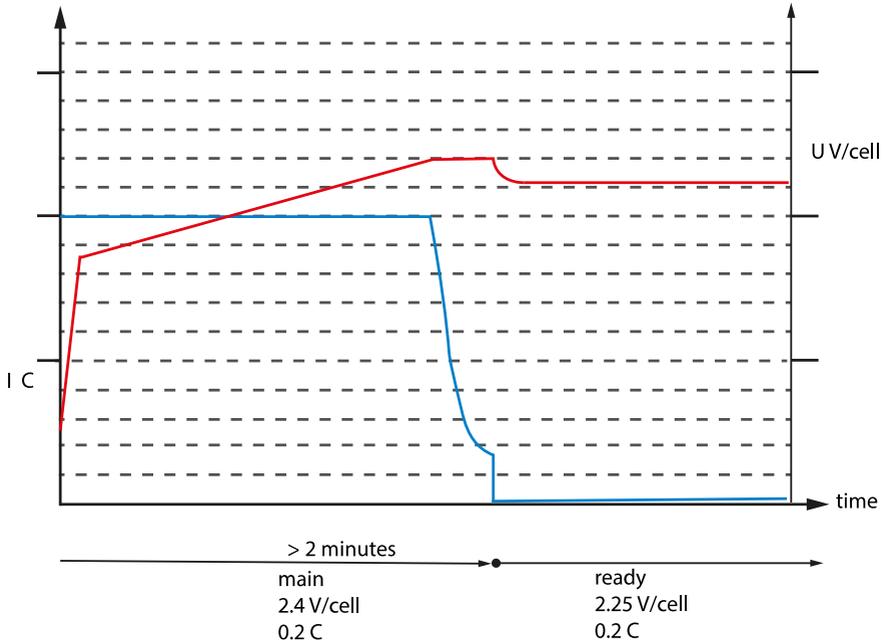


Fig. 10: Charging characteristic PP100

In the range [-30 °C ... -35 °C] and [+45 °C ... +50 °C] the current is reduced to 0.

NOTE! This charging characteristic contains a detection for weak batteries: 0.5 V per cell. Make sure that you do not charge batteries with a smaller number of cells. For example, do not charge a 12 V battery with a 24 V charging characteristic.

| Voltage per cell | 12 V system | 24 V system |
|------------------|---------------|-------------|
| 2.4 V/2.25 V | 14.4 V/13.5 V | 28.8 V/27 V |

PP101 - Sealed gel lead-acid

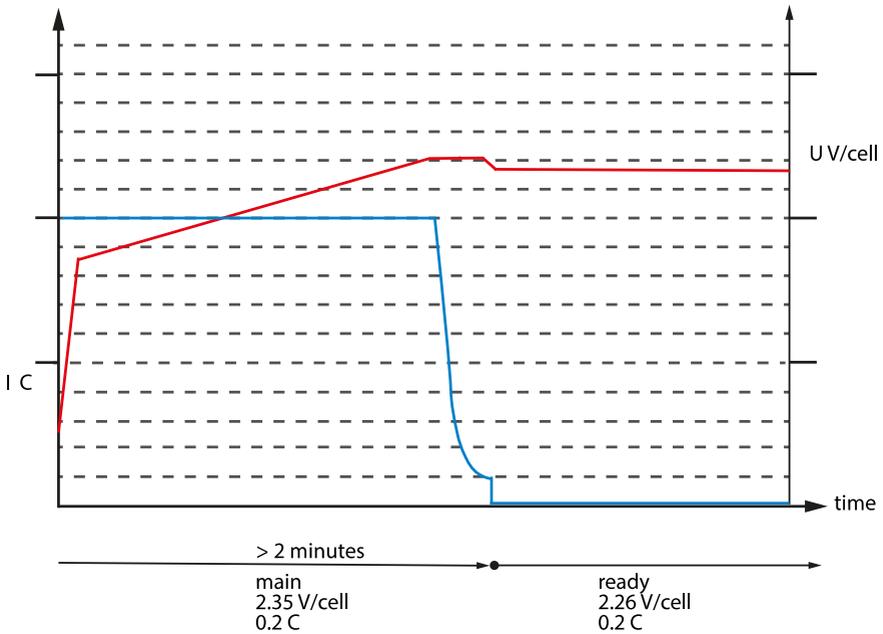


Fig. 11: Charging characteristic PP101

In the range [-30 °C ... -35 °C] and [+45 °C ... +50 °C] the current is reduced to 0.

NOTE! This charging characteristic contains a detection for weak batteries: 0.5 V per cell. Make sure that you do not charge batteries with a smaller number of cells. For example, do not charge a 12 V battery with a 24 V charging characteristic.

| Voltage per cell | 12 V system | 24 V system |
|------------------|----------------|----------------|
| 2.35 V/2.26 V | 14.1 V/13.56 V | 28.2 V/27.12 V |

PP102 - Sealed gel lead-acid "Sunshine"

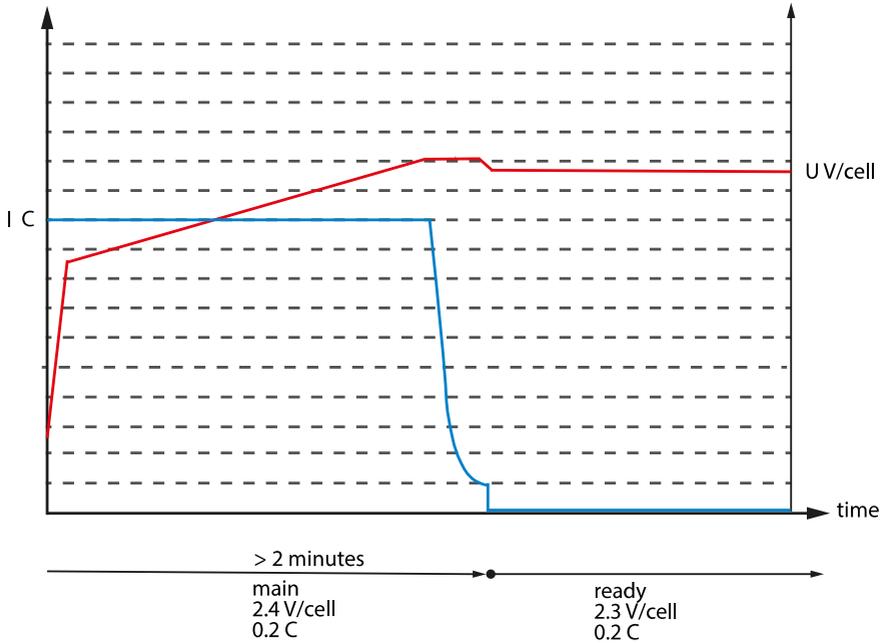


Fig. 12: Charging characteristic PP102

In the range [-30 °C ... -35 °C] and [+45 °C ... +50 °C] the current is reduced to 0.

NOTE! This charging characteristic contains a detection for weak batteries: 0.5 V per cell. Make sure that you do not charge batteries with a smaller number of cells. For example, do not charge a 12 V battery with a 24 V charging characteristic.

| Voltage per cell | 12 V system | 24 V system |
|------------------|---------------|---------------|
| 2.4 V/2.3 V | 14.4 V/13.8 V | 28.8 V/27.6 V |



We make energy mobile.

LEAB Automotive GmbH

Thorshammer 6

DE-24866 Busdorf

Tel: +49 (0) 4621 9 78 60-0

Fax: +49 (0) 4621 9 78 60-260

info@leab.eu

It is prohibited to copy, duplicate, translate or otherwise pass on the content of this guide to third parties without the express written permission of LEAB.